

Inter-Tel® 3000 Phone Quick Reference Guide







Introduction to your digital telephone set

Welcome

The Inter-Tel 3000 system is a very powerful business communication system that provides a comprehensive solution for both voice and data needs.

This quick reference guide highlights some of the many voice facilities that are provided by the system. You can use a standard telephone or the eight key and the sixteen key digital telephone sets that have extensive features. This guide helps you to use both types of phone.

Inter-Tel 3000 digital telephone set

To get the most from your Inter-Tel 3000 system, we recommend that you use the specially designed Inter-Tel 3000 digital telephone sets.

This diagram illustrates the sixteen key digital telephone set.



This diagram illustrates the eight key digital telephone set.



How to use your Inter-Tel 3000 digital telephone set

Phone Setup

To select a different Ringing Tone or Display Contrast

Select Program

Press the Scroll Down key

Select Ringing Options and select a different ringing tone.

Select \(\) Contrast Options and select a different level of contrast.

Answering and making calls

Answer a call that is ringing on the digital telephone

Pick up the handset or

Select Answer The Call and / or pick up the handset.

Answer a call that is ringing on the digital telephone set using hands-free

Select Answer The Call or press

Make an external call

Pick up the handset.

Press the Line key or Dial 9 and dial the number. If you are dialing over Primary Rate ISDN enter # after the last number to expedite dialing.

Make an internal call

Select Internal Call Select • Extension, or

Dial the extension number (20 - 59), and

Pick up the handset, or press

Transferring calls

Note: The following instructions assume you are on a call.

Transfer a call to an internal number

Select Internal transfer

Select Extension and when the call is answered

Select Transfer

Transfer an external call to an external number

Select External Transfer

Select an available line as indicated by "\$\dangle\$" and then

Dial the external number and when the call is answered

Select Transfer

Re-directing calls

Note: The following instructions assume that your extension is ringing.

Re-direct a call to another extension

Select ▶ Re-Direct The Call

Select Extension

Re-direct a call to your Voice Mail box

Select Forward To Voice Mail

Forwarding calls

Forward all calls

Press the Scroll Down Dial (1) until "Forward" is displayed.

Select Forward

Select ▶ Forward All Calls

Dial the internal extension number, or

Dial 9 and the desired external number and press "Confirm"

Or press "Forward To Voice Mail"

Cancel forward all calls

Select Cancel Forwarding

Forward calls when your extension is busy

Press the Scroll Down Dial (*) until "Forward" is displayed.

Select Forward

Select Forward When Busy

Dial the desired extension number, or

Dial 9 and the desired external number and press "Confirm", or

Press "Forward To Voice Mail".

Cancel forward a call on busy

Press the Scroll Down Dial (1) until "Forward" is displayed.

Select Forward

Select Forward When Busy and the forwarding is cancelled.

Forward calls when your extension does not answer (after four rings)

Press the Scroll Down Dial (1) until "Forward" is displayed.

Select Forward

Select Forward On No Answer

Dial the desired extension number, or

Dial 9 and the desired external number and press "Confirm", or

Press "Forward To Voice Mail".

Cancel forward a call on no answer

Press the Scroll Down Dial (1) until "Forward" is displayed.

Select Forward

Select Forward On No Answer and the forwarding is cancelled.

Forwarding group calls

Forward all calls from a group

Press the Scroll Down Key (3) until "Group Forward" is displayed.

Select • Group Forward

Select the group which is to be forwarded

Select ▶ Forward all calls

Dial the internal Extension number, or

Dial 9 and the desired external number, or

Press "Forward to Voice Mail"

Cancel group forward all calls

Select • Cancel Group Forward.

Select the group

Forward calls when the group is busy

Press the Scroll Down Key (3) until "Group Forward" is displayed.

Select • Group Forward

Select the group which is to be forwarded

Select Forward When Busy

Dial the desired Extension number, or

Dial 9 and the desired external number, or

Press "Forward To Voice Mail"

Cancel group forward when busy

Press the Scroll Down Key (3) until "Group Forward" is displayed.

Select • Group Forward

Select the group

Select Forward When Busy and the forwarding is cancelled.

Forward calls when a group does not answer (after four rings)

Press the Scroll Down Key (3) until "Group Forward" is displayed.

Select ▶ Group Forward

Select the group which is to be forwarded

Select Forward on no answer

Dial the desired Extension number, or

Dial 9 and the desired external number, or

Press "Forward to Voice Mail"

Cancel group forward on no answer

Press the Scroll Down Key (3) until "Group Forward" is displayed.

Select ▶ Group Forward

Select the group

Select Forward On No Answer and the forwarding is cancelled.

Voice Mail

Note: Voice Mail services require the Voice Mail module to be installed.

Enter a personal greeting

Press \boxtimes , and

Select ♦ Voice Messaging

Enter your extension number or select the extension from the menu

Then enter your Voice Mail box Password (default is 1111) followed by #.

Select • Greetings

Follow the text and voice prompts to enter and check your greeting.

Turn on your Voice Mail

"Forward On No Answer" to the Voice Mail is automatically set when a voice mailbox is assigned to your extension.

You may also select the other Forwarding options as required.

Press the Scroll Down key **\(\)** until "Forward" is displayed.

Select Forward

Select ♦ Forward When Busy or

Select ▶ Forward All Calls

Select "Forward To Voice Mail".

Retrieve messages from your Voice Mail box

Select New Voice Messages

Enter your extension number. You will be prompted to:

Enter your Voice Mail box Password, followed by #.

Select Play

Change your Voice Mail box Password

Press \boxtimes , then

Select Voice Messaging and enter your extension number.

Enter your existing password, (default is 1111), followed by #.

Press the Scroll Down key (1)

Select Change Password and

Enter your new password (up to 8 digits long - e.g. 12341234).

Select Confirm

Personal Speed-Dials

Program your personal Speed-Dial list - numbers and names

Press , then

Select Personal Entries

Select the index you want to program, and

Enter the number.

Select Confirm

When prompted to enter a name:

Press 2 once for A, twice for B, three times for C; press 3 once for D, twice for E, three times for F; and so on. Wait two seconds for the screen cursor to move on before entering the next letter. A maximum of ten characters per name (including spaces) is allowed. On completion of the name

Select Confirm

Press to finish programming.

Dial a number from your personal Speed-Dial list

Press . then

Select Personal Speed Dial

Select the desired location and the number will be dialed.

System Speed-Dials

Any extension can program the 500 system speed dial numbers once the speed-dial password is entered by them.

Program system Speed-Dial list - numbers and names

Press . then

Press the Scroll Down Dial (1)

Select System Entries and then

Enter the Speed-Dial password (0000 in default)

Select the index you want to program, and

Enter the number, and then

Select Confirm. When prompted to enter a name,

Press 2 once for A, twice for B, three times for C; press 3 once for D, twice for E, three times for F; and so on. Wait two seconds for the screen cursor to move on before entering the next letter. A maximum of ten characters per name (including spaces) is allowed. On completion of the name

Select • Confirm. Then select the outgoing line group.

Press to finish programming.

Dial a number in the system Speed-Dial list

Press , then

Select System Speed Dial and then

Enter the first letter of the name or scroll through the list

Select the entry and the number is dialed

Using a standard telephone

The Inter-Tel 3000 system supports standard tone dialing telephones.

Making calls

Make an external call

Lift handset or use hands-free if available.

Obtain a free line by dialing 9. Dial the digits. If dialing over Primary Rate ISDN press # to send the digits immediately.

Make an internal call

Lift the handset or use hands-free if available.

Dial the extension number (20-59), or

Dial 0 for the operator.

Transfer an external call to an internal extension

Press Hookflash.

Dial the extension number.

Replace the handset.

Put an external call on hold

Press Hookflash.

Replace the handset to continue to use phone.

Note: The call remains on hold for ninety seconds when the telephone is idle. If the telephone is busy, it will ring when the handset is replaced.

To park an external call

Press Hookflash.

Dial 712.

Replace the handset.

To retrieve a call from park

Dial 712 from any phone.

The parked call is retrieved.

Forwarding calls

Forward all calls

Lift handset or use hands-free if available.

Dial 732.

Dial the extension number, or

Dial the external phone number (including line access code 9) followed by #.

Cancel forward all calls

Lift handset or use hands-free if available.

Dial 732.

Forward calls when your telephone is busy

Lift handset or use hands-free if available.

Dial 733.

Dial the extension number, or

Dial the external number, (including line access code 9) followed by #

Cancel forwarding on busy

Lift handset or use hands-free if available.

Dial 733.

Forward calls when your telephone is not answered (after four rings)

Lift handset or use hands-free if available.

Dial 734.

Dial the extension number, or

Dial the external phone number (including line access code 9) followed by #.

Cancel group forwarding on no answer

Lift handset or use hands-free if available.

Dial 734.

Forwarding Group calls

Forward all calls from a group

Lift handset or use hands-free if available.

Key 792 followed by the Group number (180 - 199)

Dial the Extension number, or

Dial the external phone number (including line access code 9) followed by #.

Cancel group forward all calls

Lift handset or use hands-free if available.

Dial 792 followed by the Group number (180 - 199).

Forward calls when the group is busy

Lift handset or use hands-free if available

Dial 793 followed by the Group number (180 - 199)

Dial the Extension number, or

Dial the external number, (including line access code 9) followed by #.

Cancel group forward when busy

Lift handset or use hands-free if available

Dial 793 followed by the Group number (180 - 199).

Forward calls when a group does not answer (after four rings)

Lift handset or use hands-free if available

Dial 794 followed by the Group number (180 - 199)

Dial the Extension number, or

Dial the external phone number (including line access code, e.g. 9) followed by #.

Cancel group forwarding on no answer

Lift handset or use hands-free if available

Dial 794 followed by the Group number (180 - 199).

Voice Mail

Note: Voice Mail services require the Voice Mail module to be installed.

Turn on your Voice Mailbox

When you are allocated a Voice Mail box 'Forward on no answer' is automatically set to your Mail box.

The Mail box code is 710.

To Forward all your calls to your Voice Mail box dial 732 followed by 710.

To Forward on Busy to your Voice Mail box dial 733 followed by 710.

Retrieve messages from your Voice Mailbox

Lift handset or use hands-free if available.

Dial * and enter you mailbox number (extension number) and your voice mail password (1111).

Dial 1 to start replaying messages.

Note: Broken dial tone is heard when you have new messages in your voice mailbox.

Speed-Dialing

Program your personal Speed-Dial list

Lift handset or use hands-free if available.

Dial 75.

Enter the location (01-30) where you want to store the number,

Dial the number to store. Replace the handset.

Dial a number from your personal Speed-Dial list

Lift handset or use hands-free if available.

Dial 74.

Enter the location (01-30) of the number required, and the number is automatically dialed.

Dial a number from the system Speed-Dial list

Lift handset or use hands-free if available

Dial a system speed number – 8001 to 8500.

| Feature | Code | Feature | Code |
|--|---------------------------|--|---------------------------|
| Account Codes | 791 | Log out of all Hunt groups you are a | 723 * 0 |
| | | member of | |
| Call Pick-up (incoming calls only) | 726 | Night Service – on/off (Extension 20 only) | 738 |
| Call Pick-up Group (all calls) | 727 | Operator/Group 11 | 0 |
| Call Waiting Tone Protection | 725 (Hookflash 725) | Page All | 795 |
| Conference | R3 | PA announcement | 720 |
| Display Messages | 729 (1 - 8) | PA – answer | 717 |
| Do Not Disturb – | 736 | Page – Digital | 716 |
| set/cancel | | telephone sets | |
| Door Open | 731 (Hookflash 731) | Park | Hookflash 712 |
| Extensions | 20 - 59 | Phantom Mailbox numbers | 100 - 109 |
| Extension Groups | 180 - 199 | Pick up parked call | 712 |
| Extension Lock - | 713 xxx | Redial | 77 |
| lock/unlock | , 20 1000 | | |
| Extension Lock – change code | 714 xxx | Reminder Call | 718 |
| Extension Swap | 702 + Extension lock code | Reminder Call cancel | 718* |
| External Call Hold | Hookflash | Reset telephone | 739 |
| Follow Me | 735 (Password) xx | Retrieve a call placed on hold | 719 |
| Forward All Calls | 732 xx | Return and Release in two call handling | Hookflash |
| Forward on No Answer | 734 xx | Return and Hold in two call handling | Hookflash |
| Forward when Busy | 733 xx | Ring Back | Hookflash 5 |
| Group forward All Calls | 792 | Saved Number Redial | 781-785 |
| Group Forward on no Answer | 794 | Single extension Page | 715 |
| Group Forward when Busy | 793 | Speed-Dial, accessing personal numbers | 74 (01-30) |
| Hookflash to line | Hookflash 722 | Speed-Dial, | 8001-8500 |
| 2250Million to fine | TOORIUSII / 22 | accessing system numbers | 0301 0300 |
| Internal Call waiting | Hookflash 8 | Speed-Dial, programming personal numbers | 75(01 -30) |
| Line Access - Group 1 | 9 | System voice mailbox on / off | 737 |
| Line Access - Groups 2 - | 760 - 769 | Tone Protection | 725 (Hookflash 725) |
| Line Access - Individual Lines | #501 - #520 | Voice Mail box number | 710 |
| Log in / Log out of Individual Hunt group | 723 (180 - 199) | Voice mail– retrieving | * |
| Log in to all Hunt groups you are a member of | 723 * 1 | | |